

# Quick Start Guide – Type 2GT Evaluation Kit

You can use this EVK for Type2GT communication test, power evaluation. Running an application will need an external MCU  
A complete Type2GT EVK User Guide can be found in our my Murata <Type2GT LoRa Support Site> [https://my.murata.com/web/lor\\_a\\_2gt](https://my.murata.com/web/lor_a_2gt)  
If you have any questions about the support site registration process, please contact our local sales [www.murata.com/en-global/support/contactinformation](http://www.murata.com/en-global/support/contactinformation)

## About Type2GT

- Module Size: 9.98 x 8.70 x 1.74 mm(max)
- Connectivity: LoRaWAN
- Interface: SPI/GPIOS
- Support 2.4GHz / 2.1GHz S-Band
- Integrated TCXO & RF switch

## What Murata supply

- Type 2GT EVK
- Quick Start Guide
- Support Site Access Guide
- subGHz LoRa Antenna
- 2.4GHz LoRa Antenna

## What customer need

- Host MCU board
- Windows® OS(XP,7,8,10)
- LoRa gateway connected to LoRa network server

## How to connect

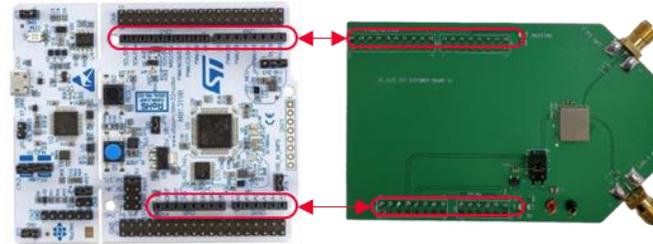


Figure1: 2GT EVK + Host Setup

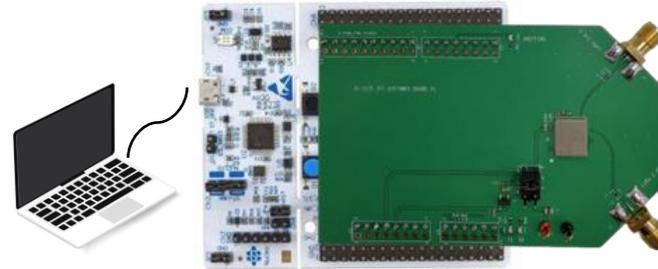


Figure2: connection to the PC

## How to program Application

- Connect 2GT EVK to the **Host MCU** Board via Arduino connectors
- Connect all the Antennas to the SMA connector
- Connect Host MCU board to PC with Micro-AB USB cable
- Run STM32Cube Programmer tool on PC and choose ST-LINK interface

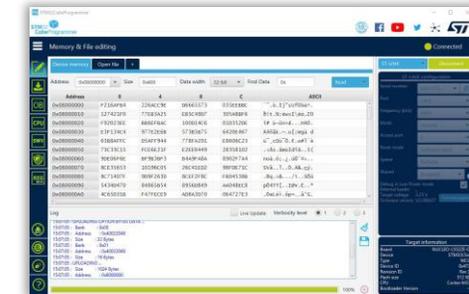


Figure3: STM32Cube programmer Configuration Window

- Select the Firmware file to be programmed
- Select the programming options:
- Click on the “Start programming” button to start programming