

# Tuning/Optimization Library for AWR Design Environment™ (Microwave Office®)

## Installation Manual

Ver.1.0



# Install procedure(1/8)

- Unzip the downloaded file (Murata\_Tune\_Optimize\_lib\_\*\*\*\*.zip) to any folder (ex. C:/temp). After unzipping, " Murata\_SMD\_Lib " folder will be made in C:/temp.


[Murata\_Tune\_optimize\_lib\_201807.zip]



 Murata\_SMD\_Lib


# Install procedure(2/8)

- In your Project from Menu please select **Project > Process Library > “Add/Remove Library...”**

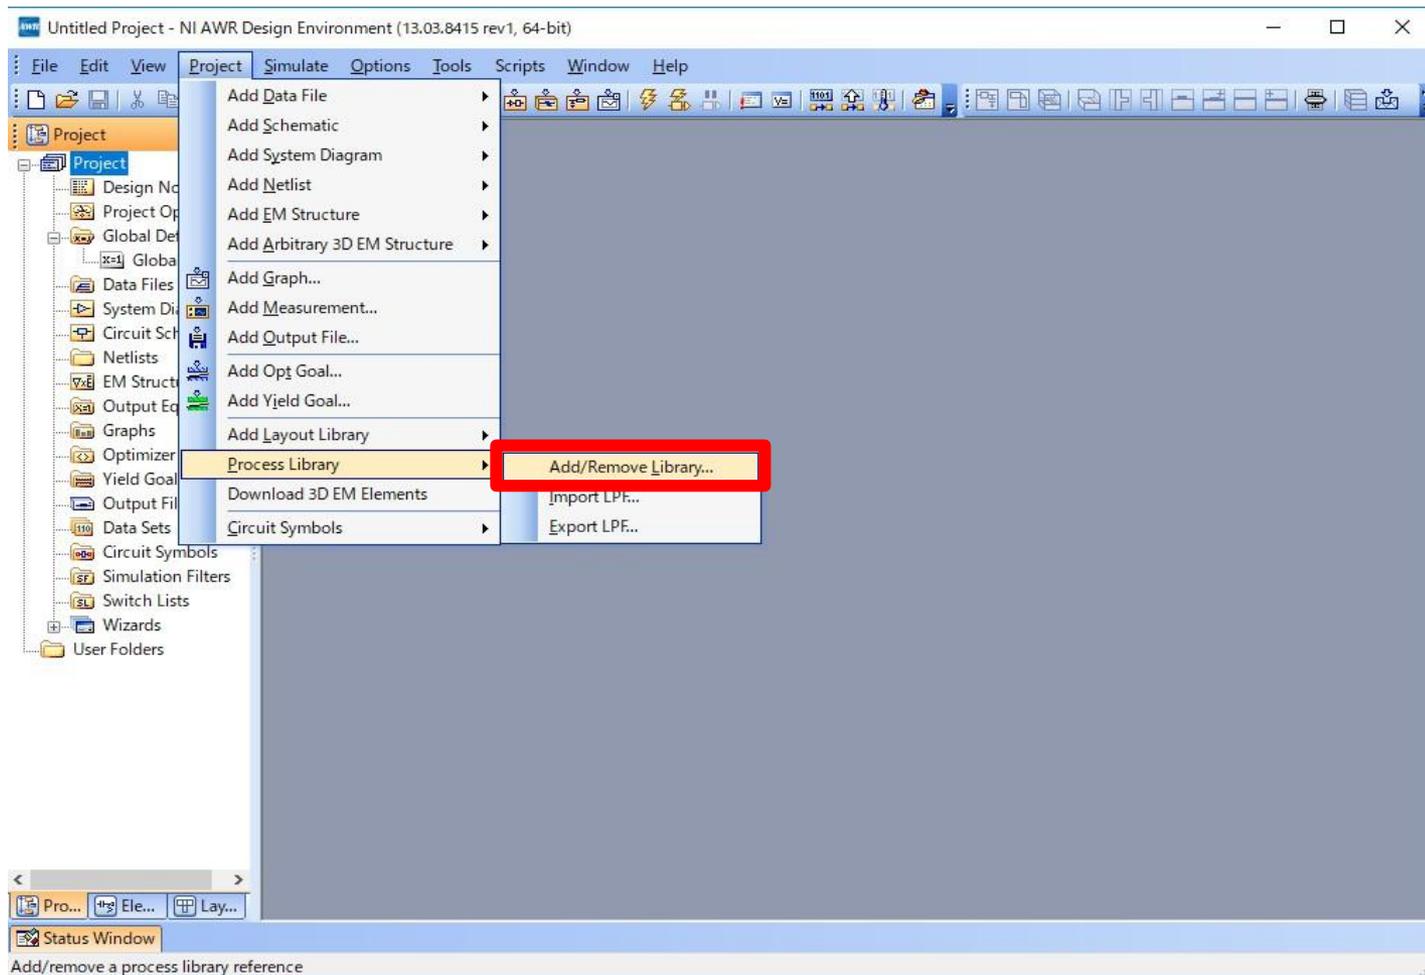


# Install procedure(3/8)

- Click “Add...”

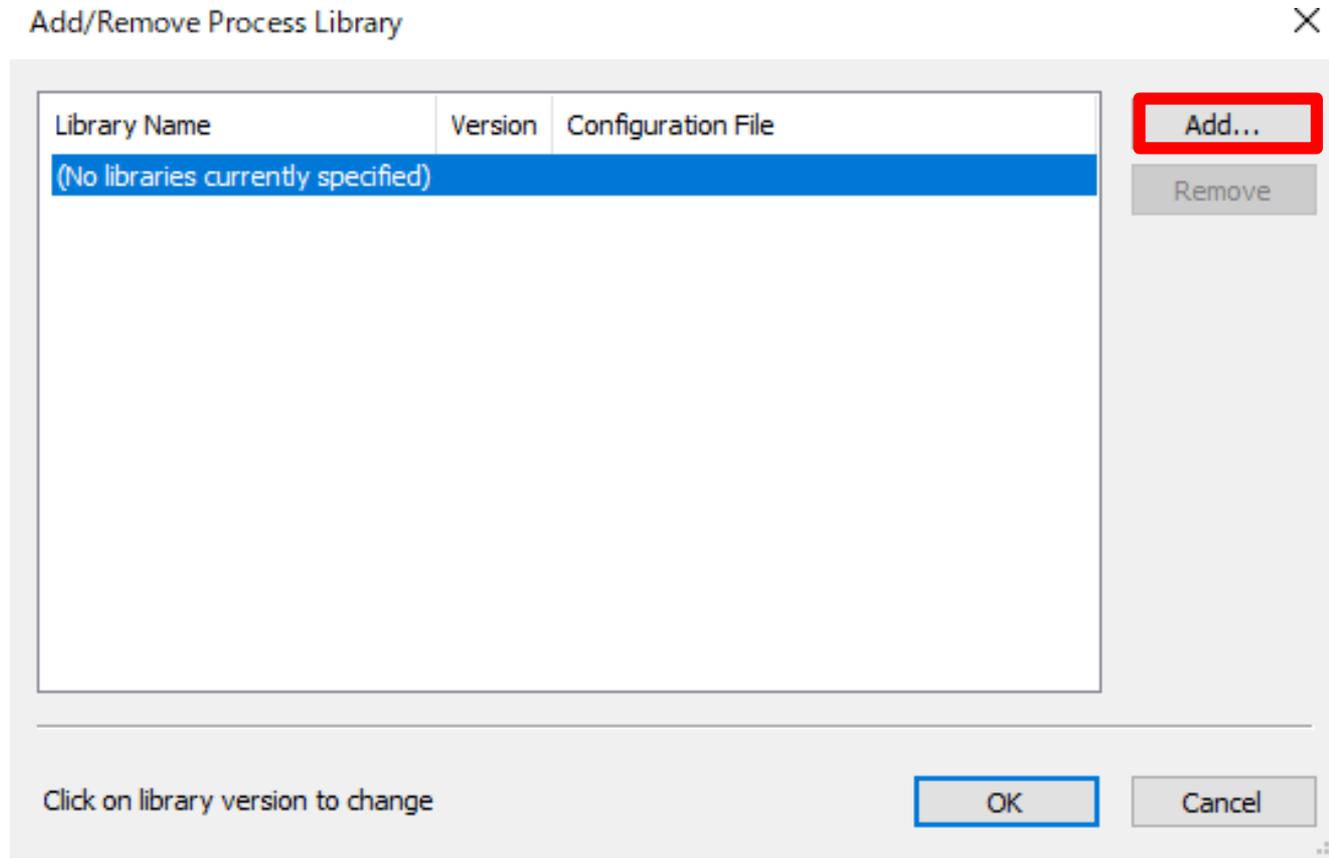

# Install procedure(4/8)

- If this is first time to use Murata Library, please click “Browse”.
- \* If not, you can find “Murata\_SMD\_Lib” in the list. In this case go to (6/8)

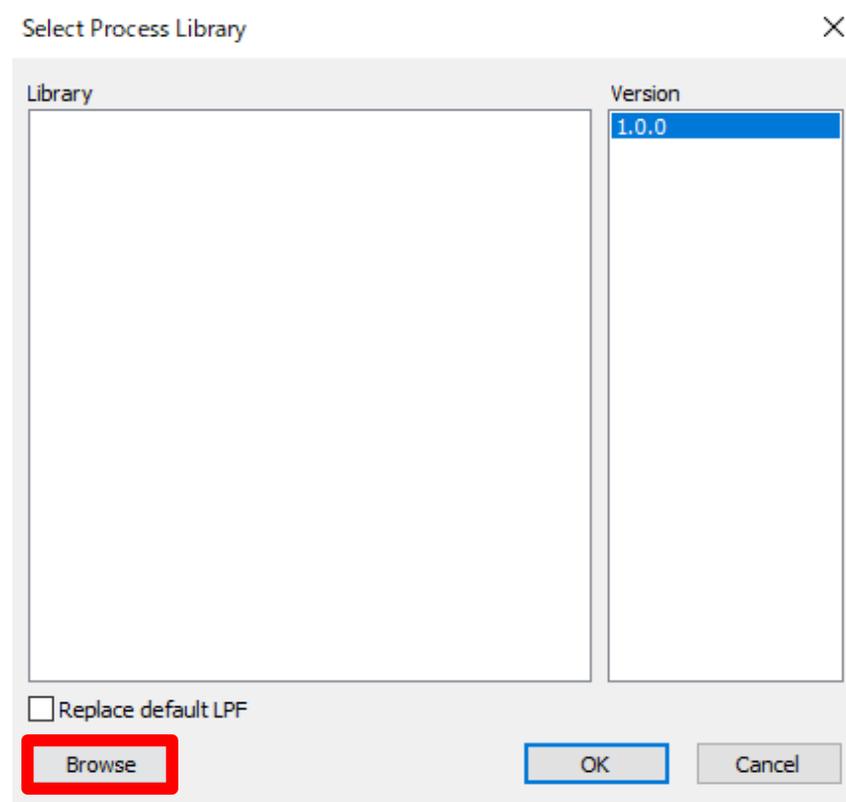


# Install procedure(5/8)

- Select “Murata\_SMD\_Lib.ini” in the PDK and Click Open




# Install procedure(6/8)

- Now you can see “Murata\_SMD\_Lib”. Please select “Murata\_SMD\_Lib” and then click OK.

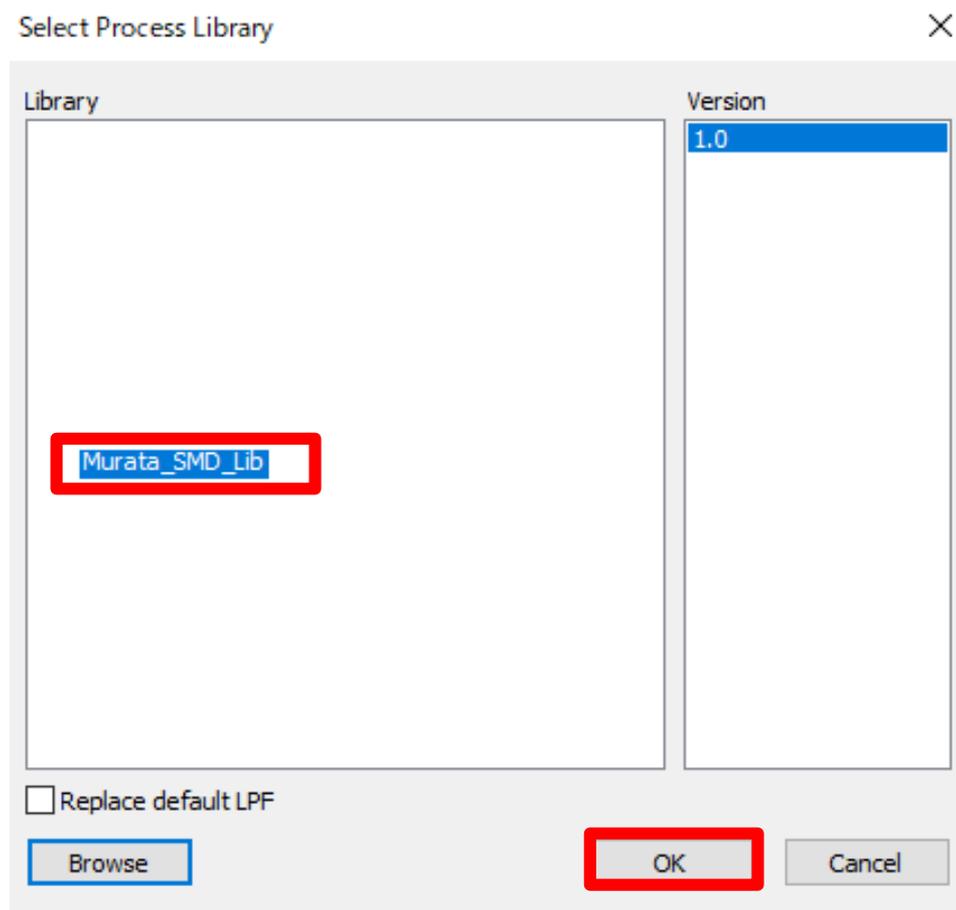

# Install procedure(7/8)

- You can see “Murata\_SMD\_Lib” is included in your project. Click OK.

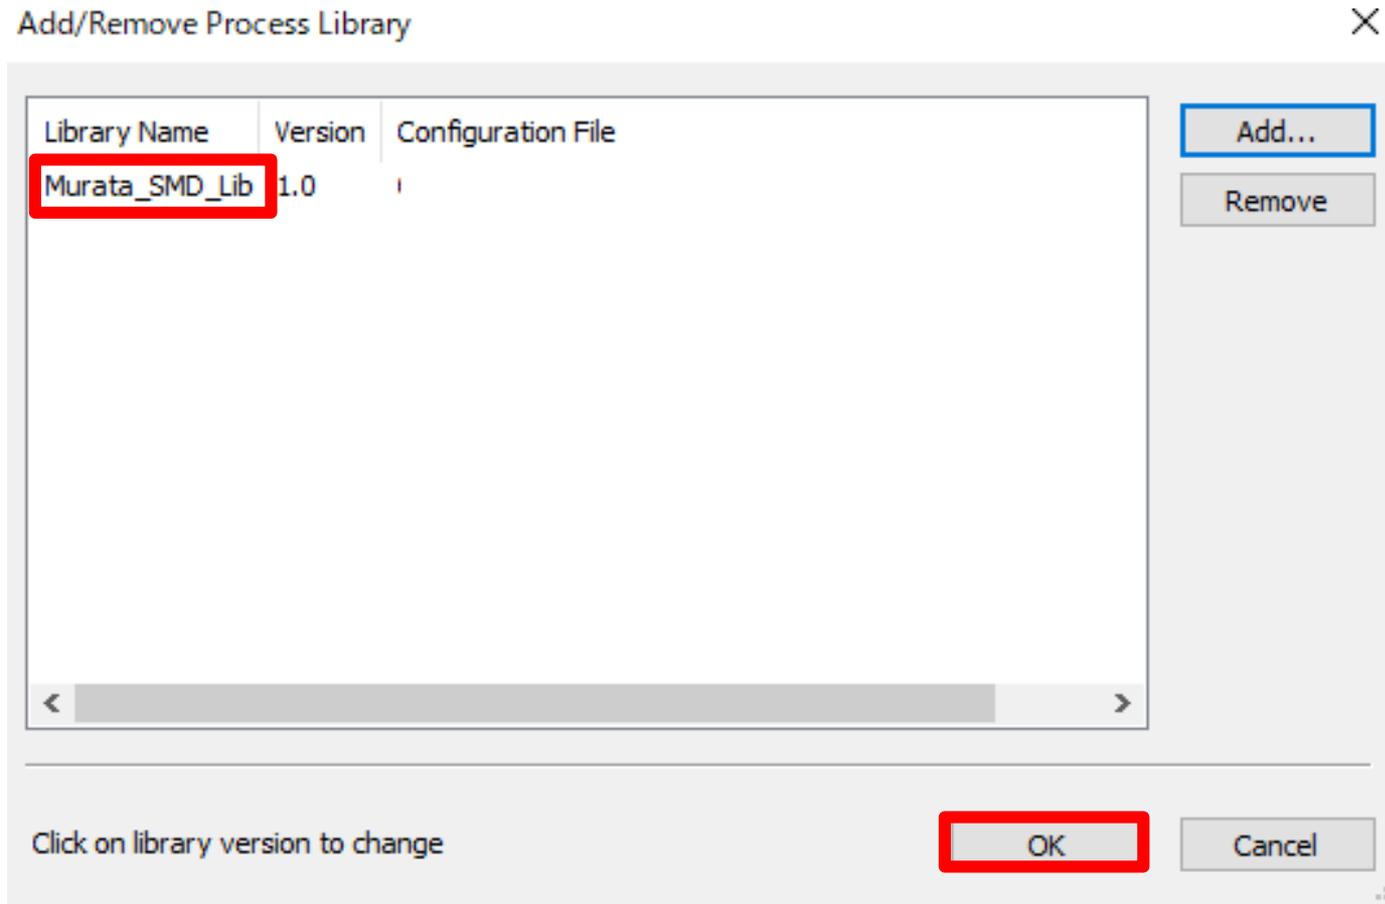

# Install procedure(8/8)

- In the project you can place Murata SMD components from the library.

