

Tuning/Optimization Library for NI AWR Design Environment™ (Microwave Office®)

Installation Manual

Ver.1.0



Install procedure(1/8)

- Unzip the downloaded file (Murata_Tune_Optimize_lib_****.zip) to any folder (ex. C:/temp). After unzipping, " Murata_SMD_Lib " folder will be made in C:/temp.


[Murata_Tune_optimize_lib_201807.zip]



 Murata_SMD_Lib


Install procedure(2/8)

- In your Project from Menu please select **Project > Process Library > “Add/Remove Library...”**

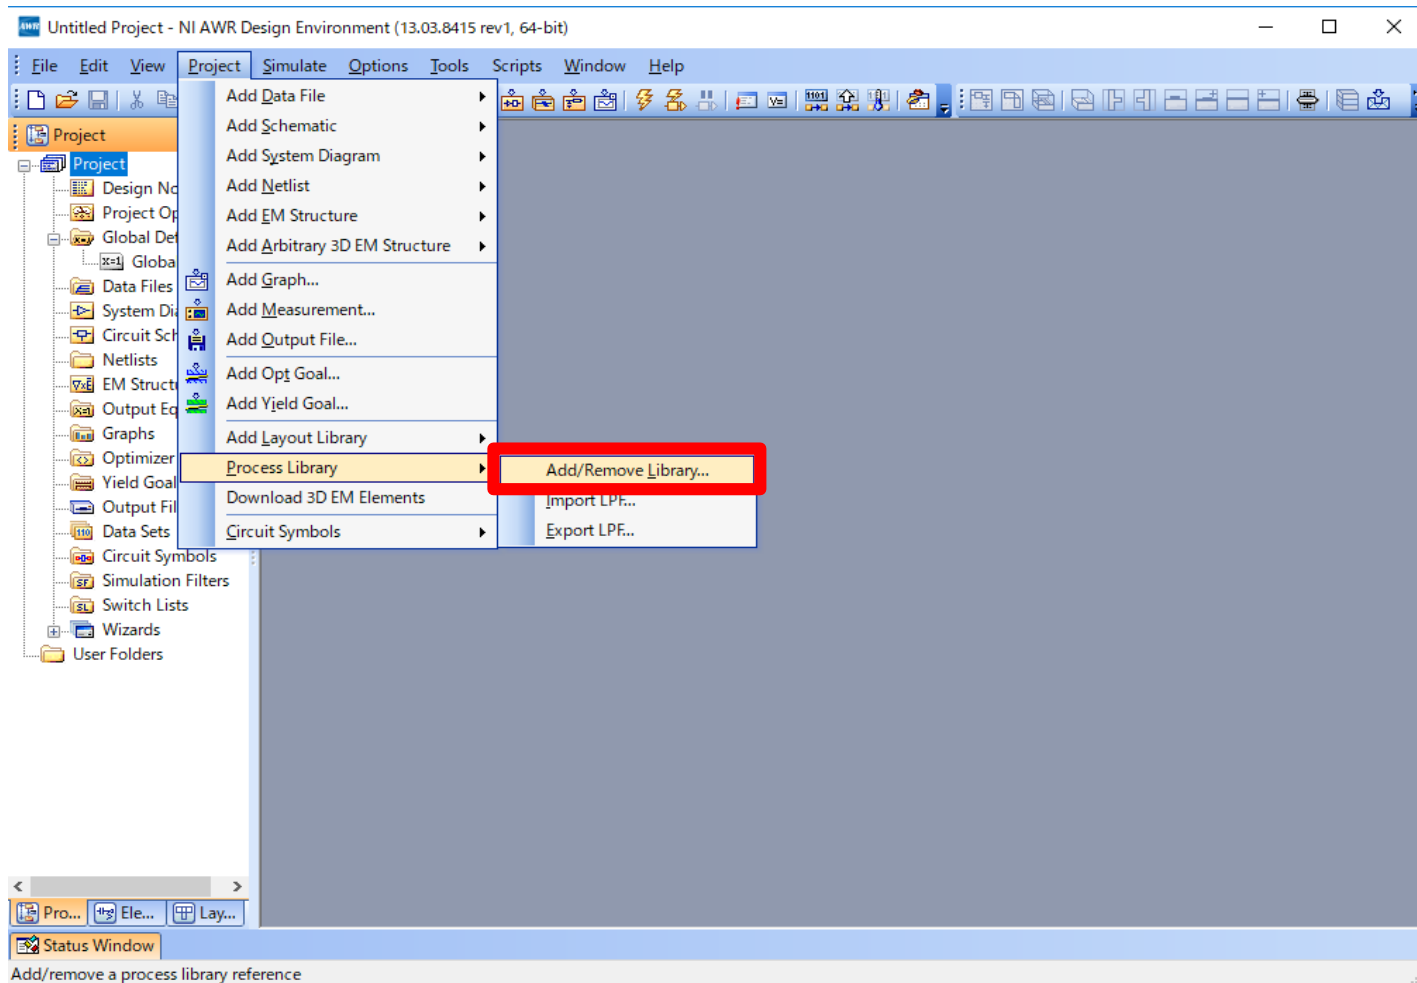

Install procedure(3/8)


- Click “Add...”

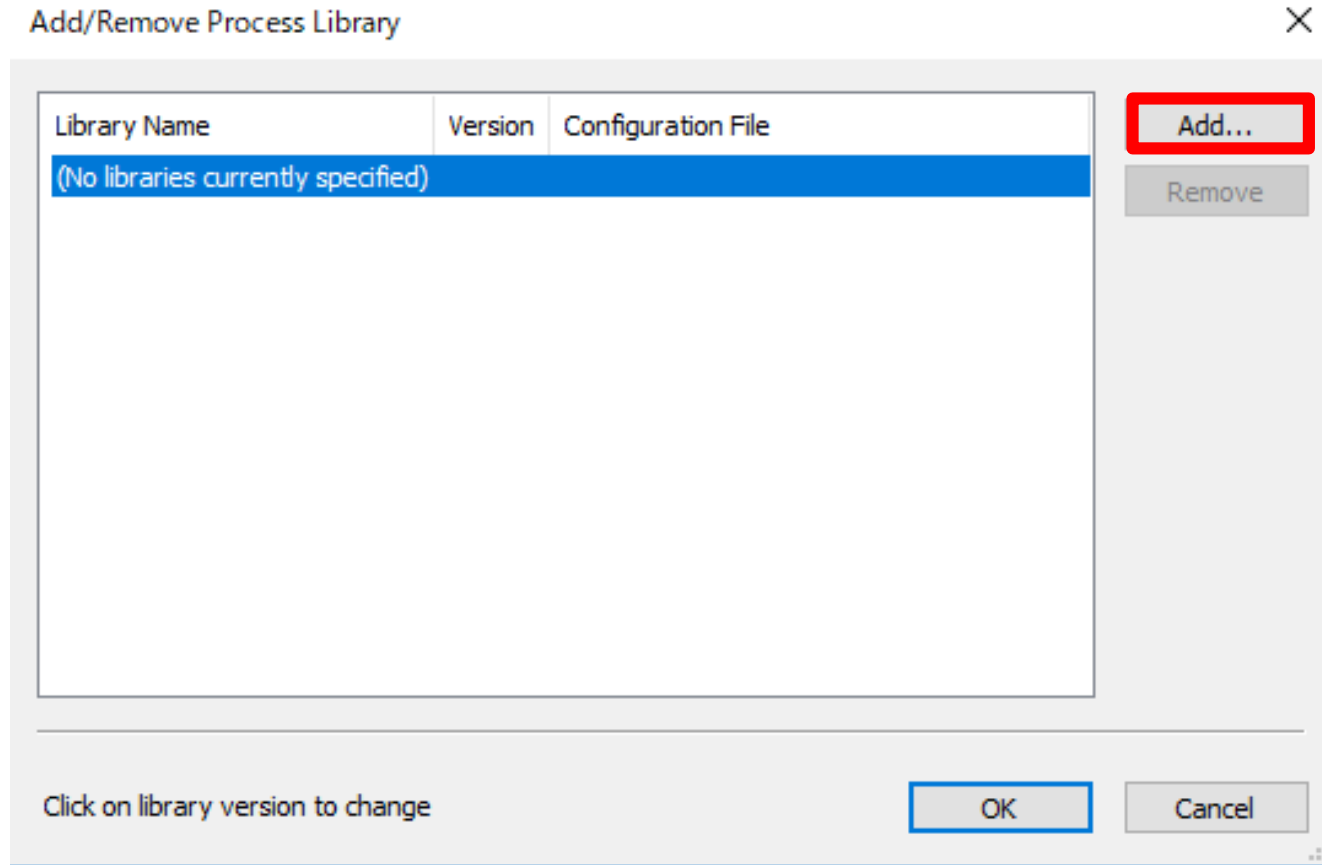

Install procedure(4/8)


- If this is first time to use Murata Library, please click “Browse”.

* If not, you can find “Murata_SMD_Lib” in the list. In this case go to (6/8)

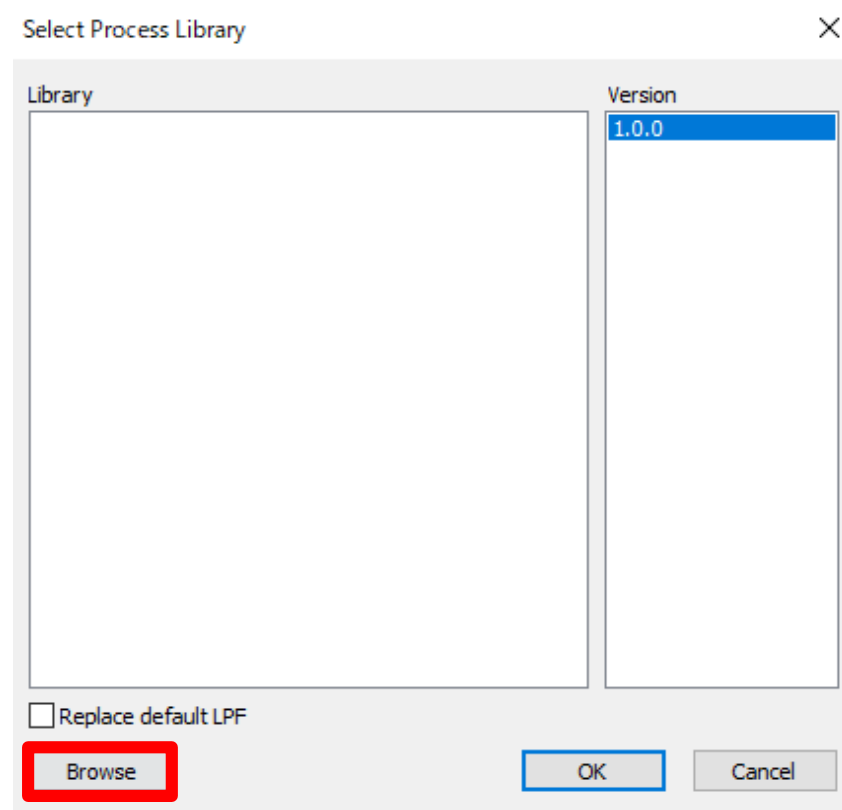


Install procedure(5/8)

- Select “Murata_SMD_Lib.ini” in the PDK and Click Open

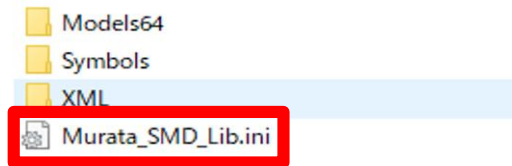


Install procedure(6/8)

- Now you can see “Murata_SMD_Lib”. Please select “Murata_SMD_Lib” and then click OK.

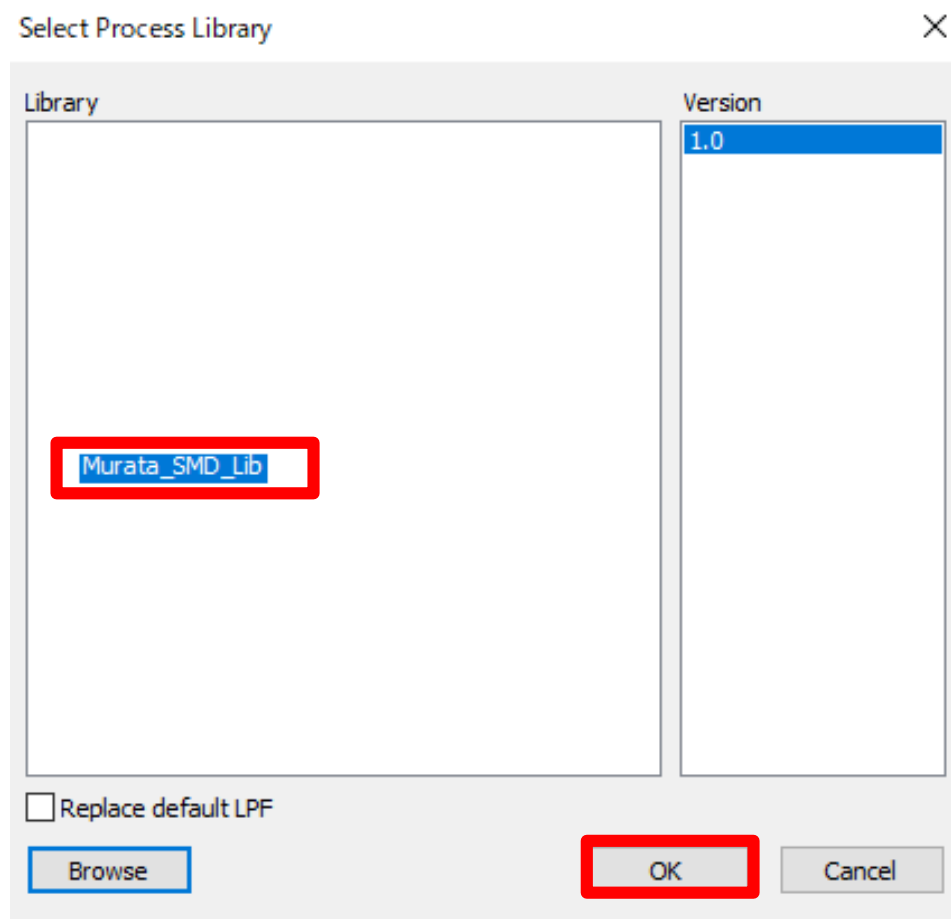

Install procedure(7/8)

- You can see “Murata_SMD_Lib” is included in your project. Click OK.

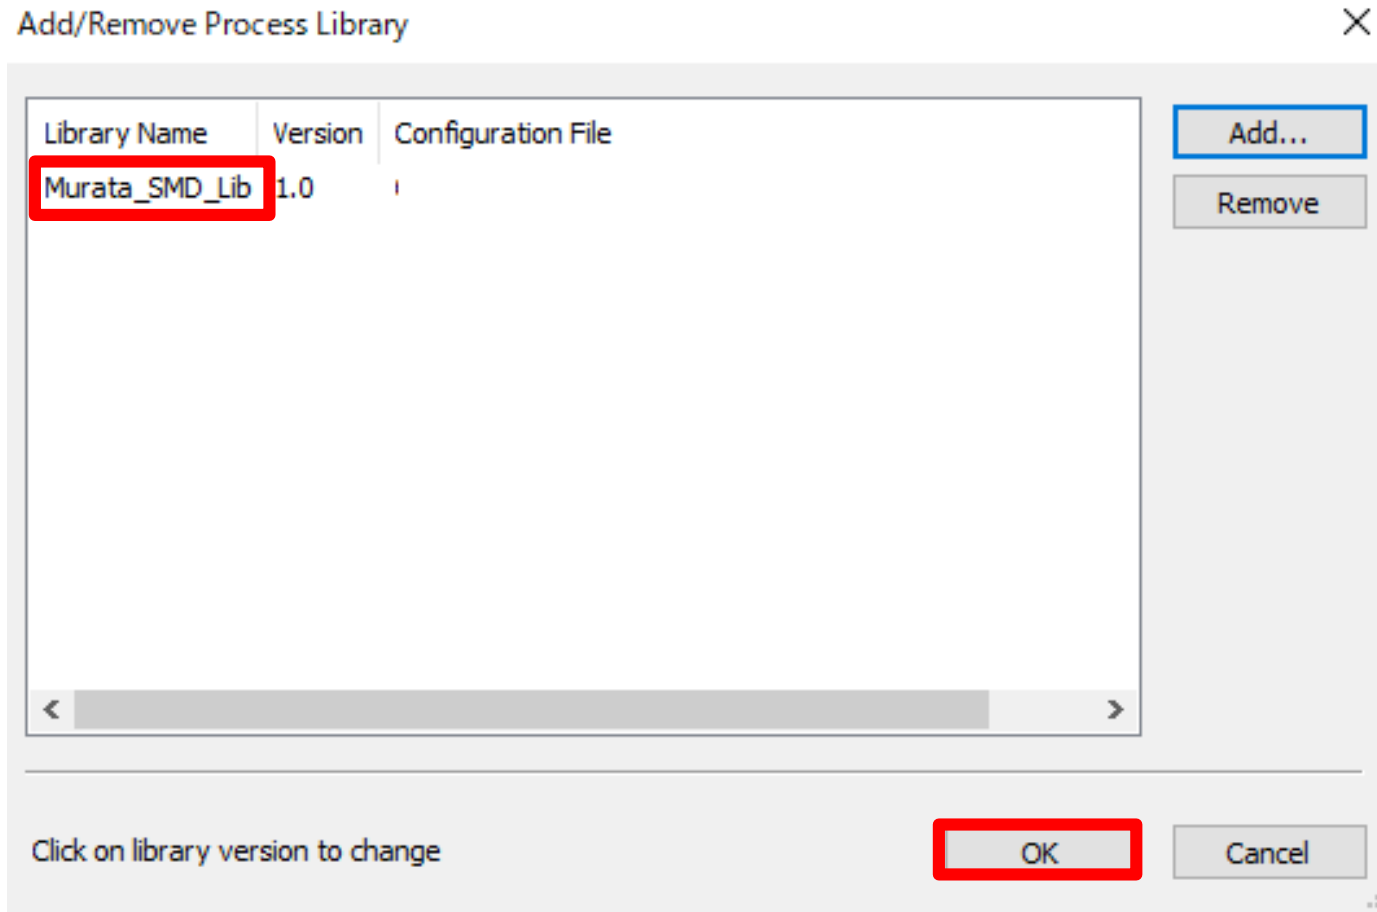

Install procedure(8/8)

- In the project you can place Murata SMD components from the library.

