

Recommendation to handle bare dies




Rev. 1.3

General description

This application note gives recommendations on how to handle bare dies* in Chip On Board (COB), Chip On Glass (COG) and flip chip technologies. Bare dies should not be handled as chips in a package.

This document highlights some specific effects which could harm the quality and yield of the production.

* separated piece(s) of semiconductor wafer that constitute(s) a discrete semiconductor or whole integrated circuit. International Electrotechnical Commission, IEC 62258-1, ed. 1.0 (2005-08).

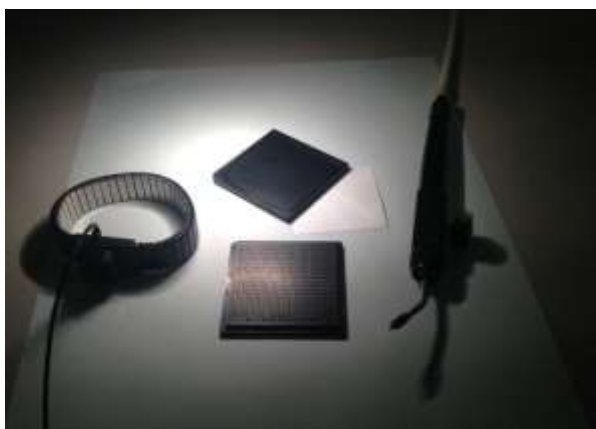

A dedicated vacuum pick up tool is used to manually move the die.

Figure 1: Vacuum pick up tool and wrist-strap for ESD protection

Delivery Forms

Bare dies are delivered in the following forms:



Figure 2: Unsawn wafer



Figure 3: Unsaun wafer in open wafer box for multi-wafer or single wafer

The wafer is saun. So please refer to the E-mapping file from wafer test (format: SINF, eg4k ...) for good dies information, especially when it is picked from metal Film Frame Carrier (FFC).



Figure 4: Wafer on Film Frame Carrier (FFC)



Figure 5: Die on tape reel



Figure 6: Waffle pack for bare die



Die Handling

Bare die must be handled always in a class 1000 (ISO 6) clean room environment: unpacking and inspection, die bonding, wire bonding, molding, sealing. Handling must be reduced to the absolute minimum, un-necessary inspections or repacking tasks have to be avoided (assembled devices do not need to be handled in a clean room environment since the product is already well packed)

Use of complete packing units (waffle pack, FFC, tape and reel) is recommended and remaining quantities have to be repacked immediately after any process (e.g. picking) step.

To avoid contaminations and damages (scratches, cracks):

- Die or wafers must never be handled with bare fingers;
- The active side of a die should never be touched;
- The mechanical pressure has to be limited;
- Do not store and transport die outside protective bags, tubes or boxes;
- Work only in ESD safe clean room environments.

Special tweezers are suitable for grabbing die and wafers on its edge (see Figure 9). Vacuum tweezers are used to move die from the packing to the target (see figures 1,7 and 8).



Figure 7: Die on a vacuum pick up tool



Figure 8: Nozzle of vacuum pick up tool

The nozzles of the vacuum pick up must be in teflon, peek or conductor nylon and their size must be chosen according to the die size.

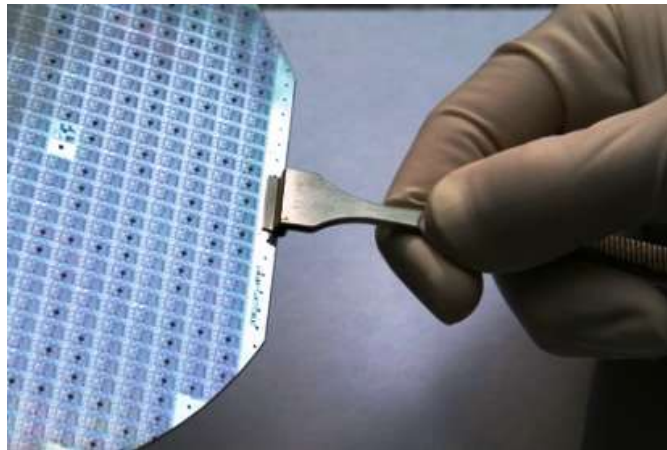


Figure 9: Special tweezers for grabbing a wafer

Examples of tools which are formally forbidden for handling of the bare dies.



Figure 10: Example of tweezers unsuitable for picking up a die

Murata Integrated Passive Solutions S.A. makes no representation that the use of its products in the circuits described herein, or the use of other technical information contained herein, will not infringe upon existing or future patent rights. The descriptions contained herein do not imply the granting of licenses to make, use, or sell equipment constructed in accordance therewith. Specifications are subject to change without notice.



www.murata.com

mis@murata.com